


WEIDER8510[®]

Model No. WESY85101
Serial No. _____
(Write the serial number in the space above for reference.)

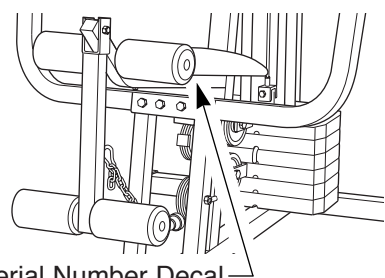


QUESTIONS?
As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that there are missing or damaged parts, we will guarantee you complete satisfaction through our Customer Service Department.

Please CALL:
0345-089009

Or WRITE:
ICON Fitness Lifestyle Ltd.
Greenwich House
223 North Street
Sheepscar
West Yorkshire
Leeds LS7 2AA

CAUTION
Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

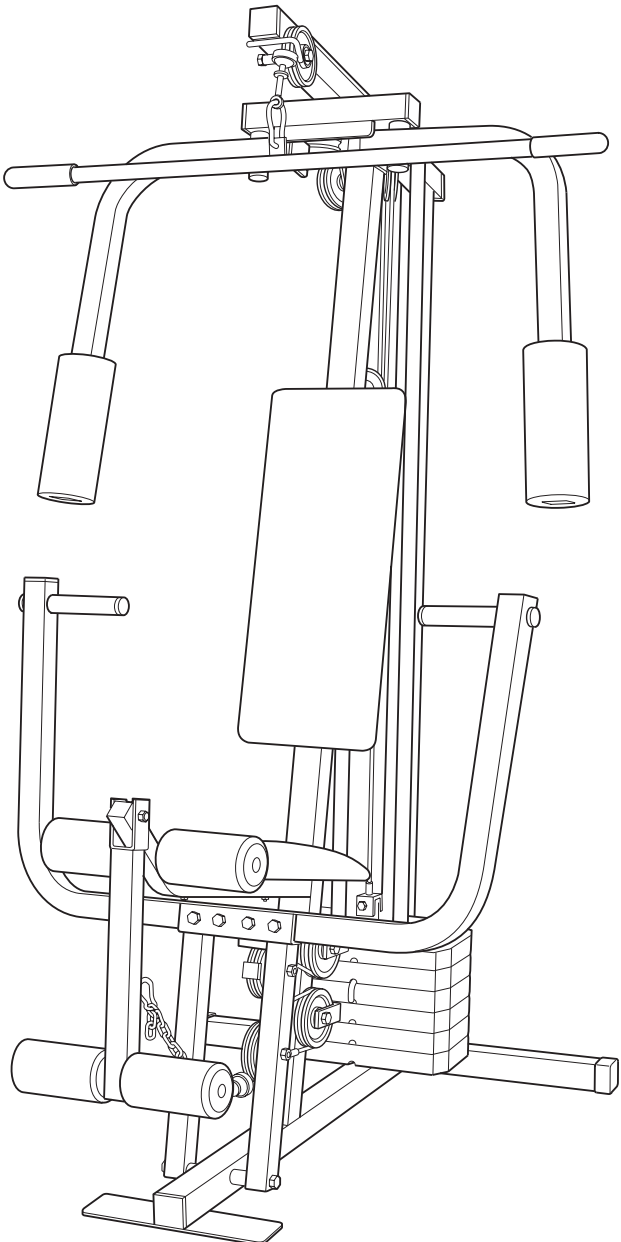

USER'S MANUAL

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
ADJUSTMENT	17
TROUBLE-SHOOTING AND MAINTENANCE	19
CABLE DIAGRAM	20
PART LIST	22
EXPLODED DRAWING	23
ORDERING REPLACEMENT PARTS	Back Cover

Note: a PART IDENTIFICATION CHART is attached to the centre of this manual. Remove the PART IDENTIFICATION CHART before beginning assembly.

IMPORTANT PRECAUTIONS

WARNING: To reduce the risk of serious injury, read the following important precautions before using the home gym system.

1. It is the responsibility of the owner to ensure that all users of the home gym system are adequately informed of all precautions.

2. Read all instructions in this manual and in the accompanying literature before using the home gym system.

3. If you feel pain or dizziness at any time whilst exercising, stop immediately and begin cooling down.

4. Use the home gym system only on a level surface. Cover the floor or carpet beneath the home gym system for protection.

5. Inspect and tighten all parts often. Replace any worn parts immediately.

6. Keep children under 12 and pets away from the home gym system at all times.

7. Always wear athletic shoes for foot protection.

8. Keep hands and feet away from moving parts.

9. Always stand on a foot plate when performing an exercise that could cause the home gym system to tip.

10. Never release the press arm, butterfly arms, leg lever, lat bar, or nylon strap whilst weights are raised. The weights will fall with great force.

11. Inspect all cables before each use. Make sure that the cables remain on the pulleys at all times. If the cables bind whilst you are exercising, stop immediately and make sure that the cables are on all of the pulleys. Replace all cables every two years.

12. Always disconnect the lat bar from the home gym system when performing an exercise that does not use the lat bar.

13. The home gym system is intended for home use only. Do not use the home gym system in any commercial, rental, or institutional setting.

WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


BEFORE YOU BEGIN

Thank you for selecting the versatile WEIDER® 8510 Home Gym System. The WEIDER® 8510 offers a selection of weight stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the WEIDER® 8510 will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the WEIDER® 8510 Home Gym System. If you

have additional questions, please call our Customer Service Department at **0345-089009**. To help us assist you, please note the product model number and serial number before calling. The model number is WESY85101. The serial number can be found on a decal attached to the WEIDER® 8510 (see the front cover of this manual).

Before reading further, please review the drawing below and familiarise yourself with the parts that are labelled.

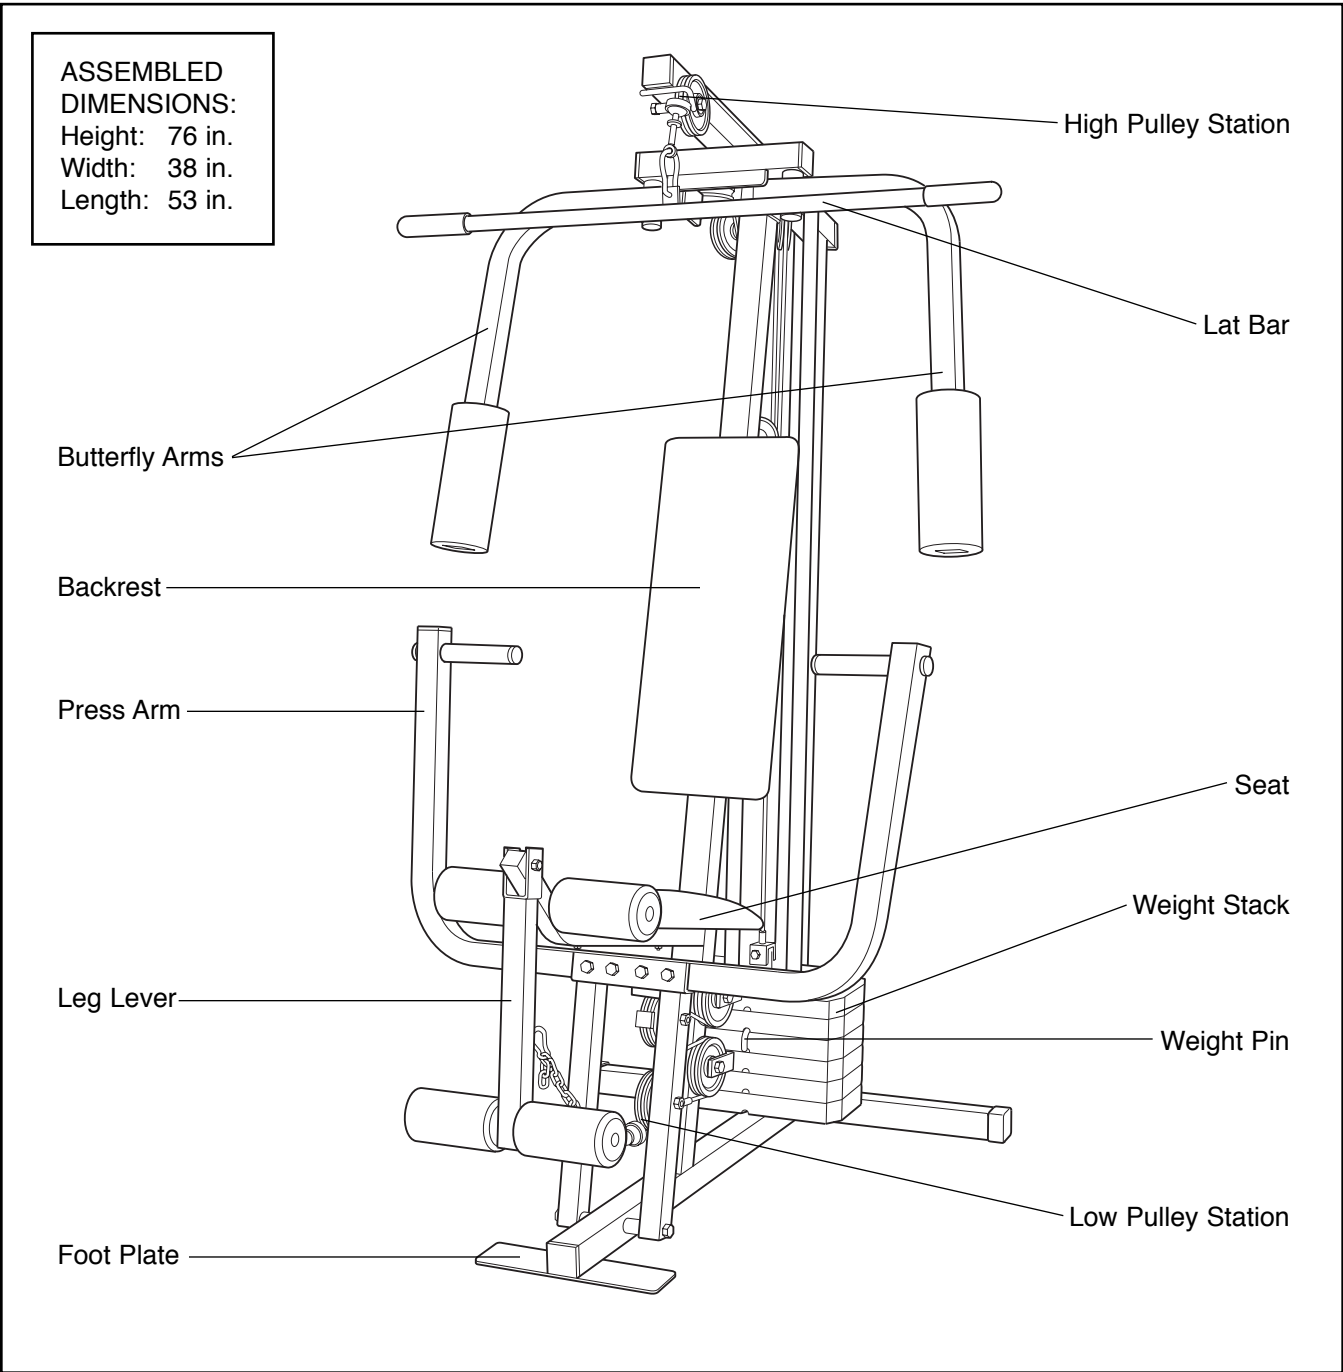





ASSEMBLY

Before beginning assembly, carefully read the following information and instructions:

- Place all parts of the home gym system in a cleared area and remove the packing materials; do not dispose of the packing materials until assembly is completed.
- The assembly is divided into four stages: 1) frame assembly, 2) press and butterfly arm assembly, 3) cable and pulley assembly, and 4) seat and backrest assembly. The hardware for each stage is packaged separately.
- Wait until you begin each assembly stage to open that parts bag.
- For help identifying the small parts used in assembly, **use the PART IDENTIFICATION CHART located in the centre of this manual.** Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.

- As you assemble the home gym system, be sure that all parts are oriented as shown in the drawings.
- Tighten all parts as you assemble them, unless instructed to do otherwise.

THE FOLLOWING TOOLS (NOT INCLUDED) ARE REQUIRED FOR ASSEMBLY:

- **Two (2) adjustable spanners** 
- **One (1) standard screwdriver** 
- **One (1) phillips screwdriver** 
- **One (1) rubber mallet** 
- **Lubricant, such as grease or petroleum jelly, and soapy water will also be needed.**

Assembly will be more convenient if you have the following tools: A socket set, a set of open-end or closed-end spanners, or a set of ratchet spanners.


FRAME ASSEMBLY

1. **Before beginning assembly, be sure that you have read and understand the information in the box above.**


Press a 2” Square Outer Cap (51) onto each end of the Stabiliser (5). Press a 2” Square Inner Cap (27) into the end of the Base (4).

Insert two 5/16” x 2 3/4” Carriage Bolts (14) up through the Stabiliser (5). Insert two 5/16” x 2 1/2” Carriage Bolts (1) up through the Base (4).


Slide the indicated end of the Base (4) onto the 5/16” x 2 3/4” Carriage Bolts (14) in the Stabiliser (5). Slide the Rear Upright (56) onto the Carriage Bolts. Hand tighten a 5/16” Nylon Locknut (3) onto each Carriage Bolt. **The high side of the bracket on the Rear Upright must be on the side shown. Do not tighten the Nylon Locknuts yet.**

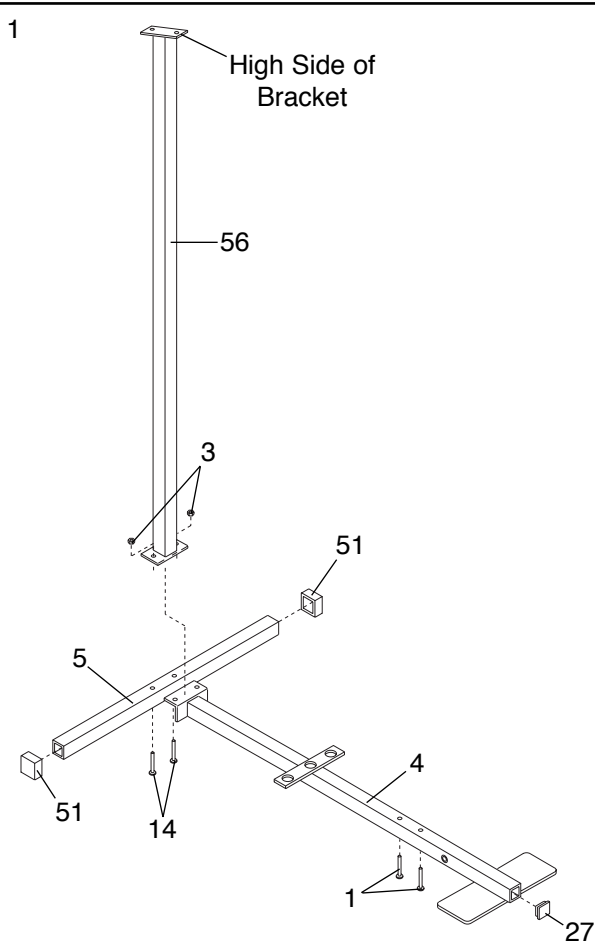


2. Slide the Front Upright (42) onto the 5/16" x 2 1/2" Carriage Bolts (1) in the Base (4). Hand tighten a 5/16" Nylon Locknut (3) onto each Carriage Bolt. **Do not tighten the Nylon Locknuts yet.**
- Press a 1" Square Inner Cap (65) into the Front Upright (42).

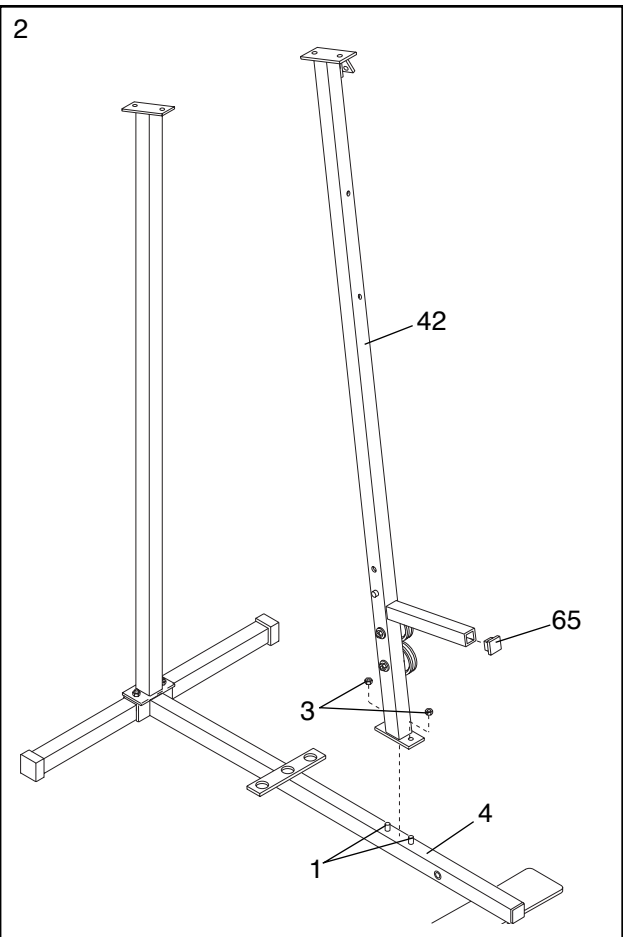

3. Press a 2" Square Inner Cap (27) into each end of the Top Frame (55). Press a 1 3/4" Square Inner Cap (44) into each end of the crossbar on the Top Frame. Press two 1" Round Inner Caps (49) into the top of the crossbar.
- Attach the Top Frame (55) to the Front Upright (42) and the Rear Upright (56) with four 5/16" x 2 3/4" Bolts (11), four 5/16" Flat Washers (8), and four 5/16" Nylon Locknuts (3).

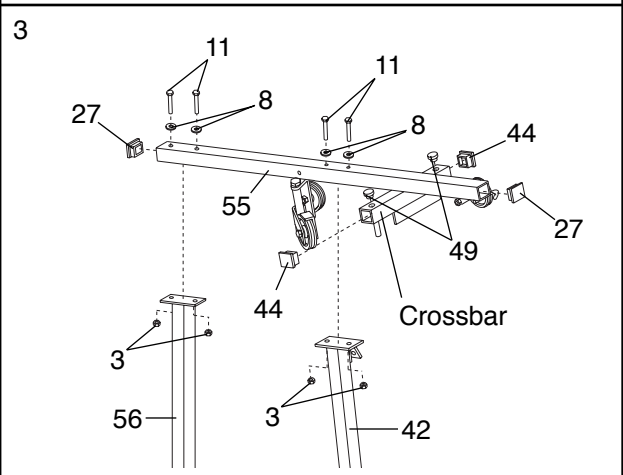

- Tighten all Nylon Locknuts used in steps 1 through 3.**
4. Set two Weight Bumpers (19) onto the bracket on the Base (4) as shown.
- Stack six Weights (25) on the Weight Bumpers (19). Be sure that all of the Weights are turned so the pin grooves are on the same side. **Be careful not to tip the stack of Weights.**

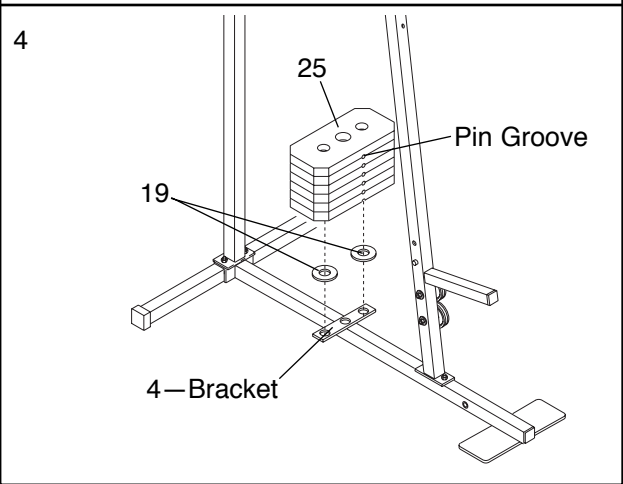

- Press the Weight Tube Bumper (64) into the end of the Weight Tube (63). Insert the Weight Tube into the stack of Weights (25). Be sure that the pins on the Weight Tube are resting in the pin grooves in the upper Weight.

Lubricate the insides of the holes in the Top Weight (76). Set the Top Weight onto the stack of Weights (25).


Insert both Weight Guides (62) into the stack of Weights (25). **Be sure that the holes in the Weight Guides are at the top, as shown.**

- Attach the upper ends of the Weight Guides (62) to the Top Frame (55) with the 5/16" x 6" Bolt (60), two 1/2" x 3/4" Spacers (61), and a Nylon Locknut (3).

Be sure that the Pulley Bracket (20) is in front of the right Weight Guide (62) as shown.

- Press a 1" x 7/8" Plastic Bushing (75) onto each welded spacer on the Press Frame (17). Slide the Press Frame into place on the Base (4). **Note: This will be a tight fit. The Plastic Bushings should fit onto each end of the indicated tube in the Base. Be sure that the pulleys are on the indicated side.**

Lubricate the 3/8" x 8" Bolt (59). Attach the Press Frame (17) to the Base (4) with the 3/8" x 8" Bolt and a 3/8" Nylon Locknut (21).

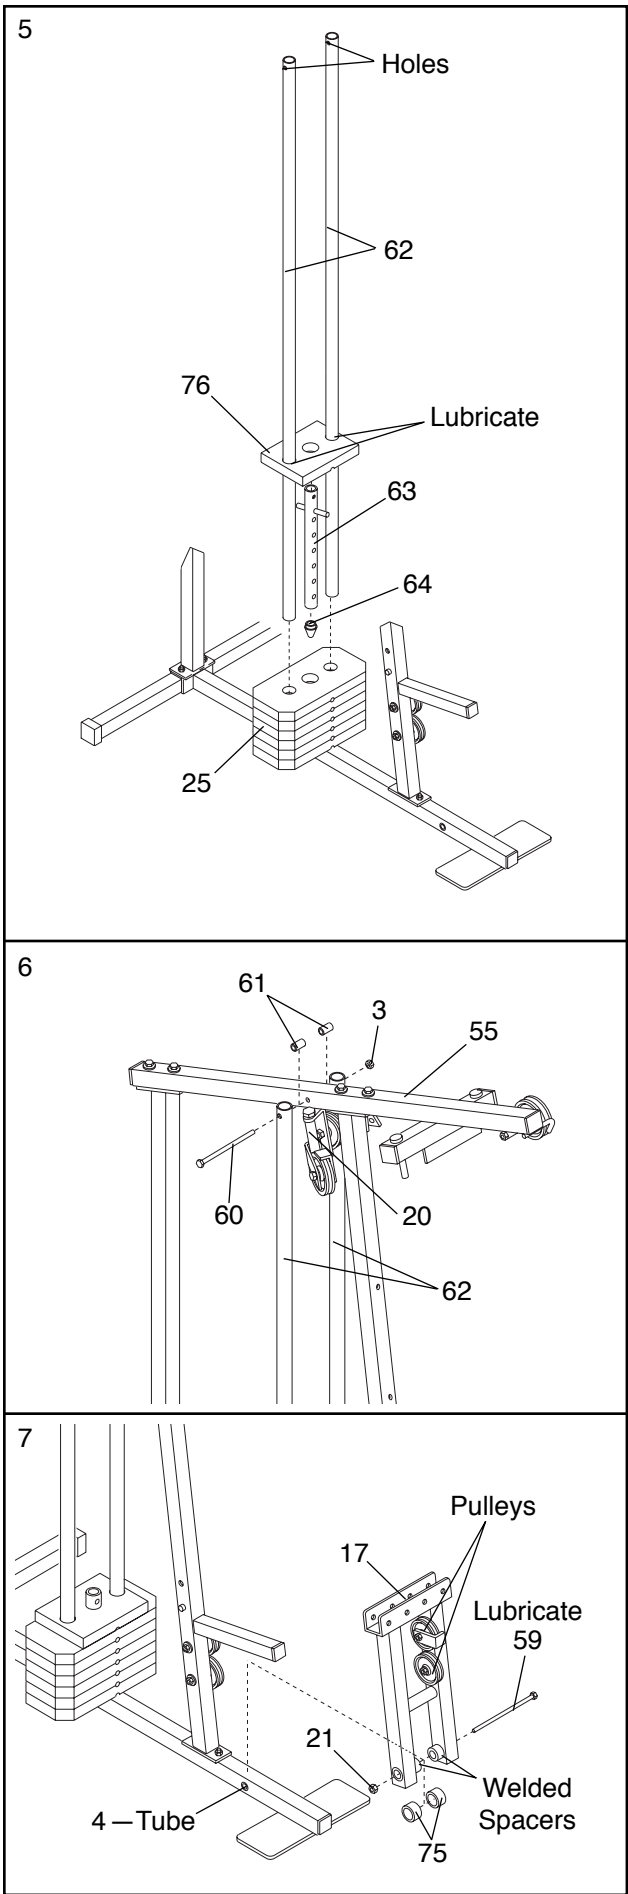

8. Press a 1 3/4" Square Inner Cap (44) into the top of a Press Arm (46). Press a 1" Round Inner Cap (49) into each end of the handle on the Press Arm. Attach the Press Arm to one side of the Press Frame (17) with two 5/16" x 2 1/2" Bolts (22) and two 5/16" Nylon Locknuts (3).

Assemble the other Press Arm (46) in the same manner.

9. Identify the Right Arm (48) and the Left Arm (47). Note the position of the welded bracket on each Arm. **Arm identification is very important for step 10.**

Note: The "V"-Pulleys (6), Long Cable Traps (50), 3/8" x 2 1/2" Bolts (7), and 3/8" Nylon Locknuts (21) are pre-attached. These have been shown disassembled for easy part identification.


10. Lubricate both axles on the Top Frame (55).

Slide the Right Arm (48) onto the right axle. **Note: Be careful not to confuse the Right Arm with the Left Arm (47); refer to step 9 to identify the Right Arm. Be sure that the upper end of the Right Arm is behind the indicated bracket on the Top Frame (55).**

Tap two 1" Retainers (69) and a 1" Round Cover Cap (70) onto the right axle. **Be sure that the teeth on the Retainers bend toward the Cover Cap, as shown in the inset drawing.**

Attach the Left Arm (47) in the same manner.

Press 1 3/4" Square Inner Caps (44) into the lower ends of the Right and Left Arms (47, 48). Wet the lower end of each Arm with soapy water. Slide a 10" Pad (45) onto the lower end of each Arm.

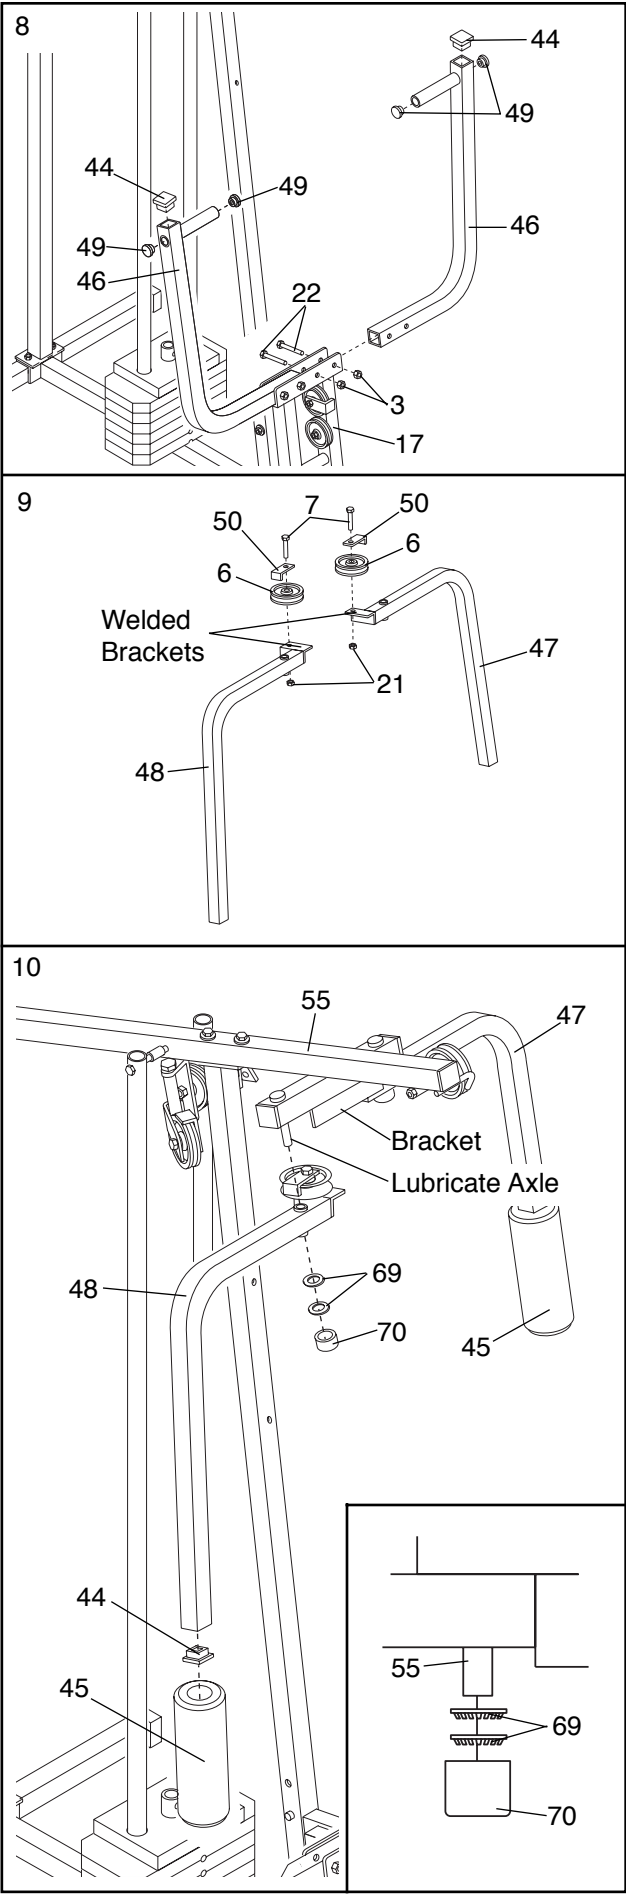


11. During steps 11 through 25, refer to the CABLE DIAGRAM on page 20 of this manual to verify proper cable routing. Before beginning this section, identify the Long Cable (23) and the Short Cable (58) by comparing the lengths and ends of the cables.

IMPORTANT: Whilst assembling the cables, do not overtighten the bolts and nuts securing the pulleys. The pulleys must be able to turn freely.


12. **Locate the Long Cable (23).** Route the Long Cable around the indicated 3 1/2" Pulley (15) attached to the Top Frame (55). **Be sure that the end of the Cable with the ball is on the indicated side of the Pulley and that the Cable is between the Pulley and the hook.** Tighten the 3/8" x 3 3/4" Bolt (71) and the 3/8" Nylon Locknut (not shown).

13. Wrap the Long Cable (23) around a "V"-Pulley (6). Attach the "V"-Pulley and a Long Cable Trap (50) to the indicated bracket on the Front Upright (42) with a 3/8" x 2 1/2" Bolt (7) and a 3/8" Nylon Locknut (21). **Be sure that the Long Cable Trap is positioned to hold the Cable in place.**


14. Route the Long Cable (23) around the "V"-Pulley (6) on the Left Arm (47). **Be sure that the Cable is in the groove of the Pulley and that the Long Cable Trap (50) is positioned to hold the Cable in place.** Tighten the 3/8" x 2 1/2" Bolt (7) and the 3/8" Nylon Locknut (not shown).

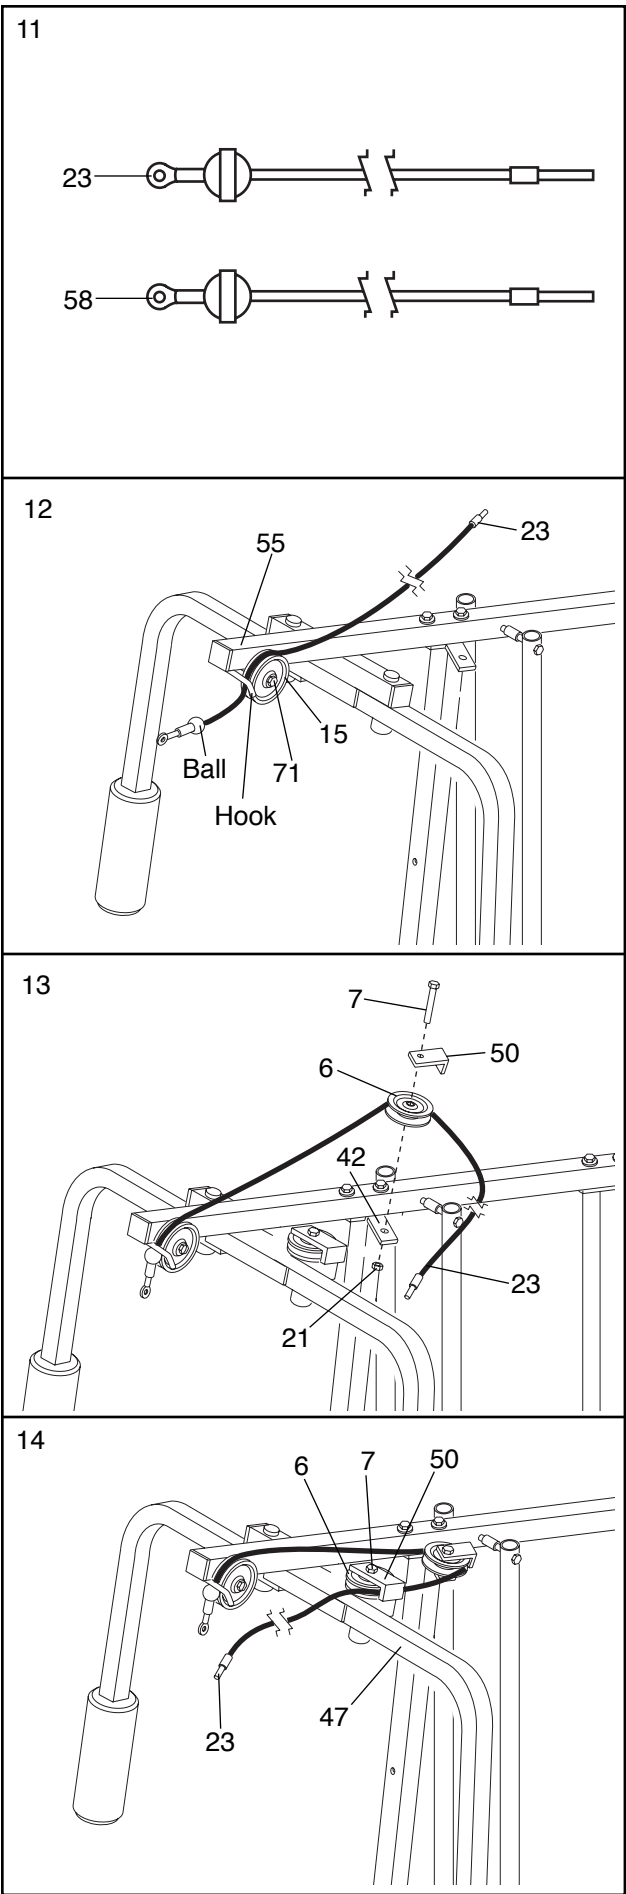


15. Route the Long Cable (23) around the “V”-Pulley (6) on the Right Arm (48). **Be sure that the Cable is in the groove of the “V”-Pulley and that the Long Cable Trap (50) is turned to hold the Cable in place.** Tighten the 3/8” x 2 1/2” Bolt (7) and the 3/8” Nylon Locknut (not shown).

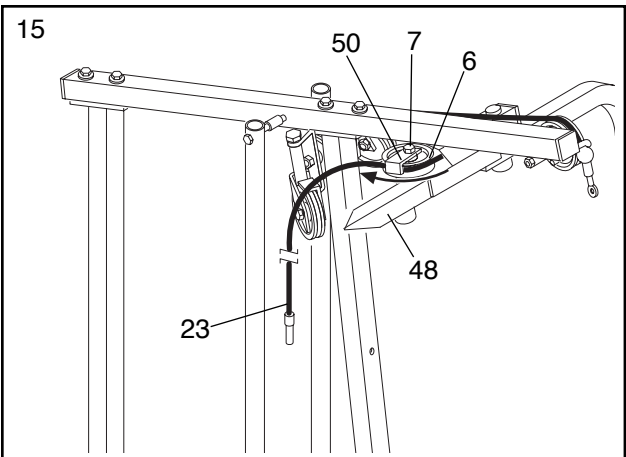

16. Route the Long Cable (23) around the 3 1/2” Pulley (15) attached to the Pulley Bracket (20). **Be sure that the Cable is in the groove of the Pulley and that the Cable Trap (66) is turned to hold the Cable in place.** Tighten the 3/8” x 2” Bolt (12) and the 3/8” Nylon Locknut (not shown).

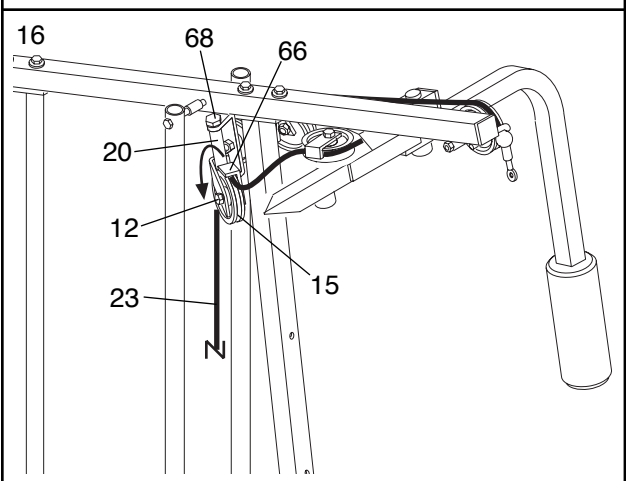


17. See the inset drawing. Attach a 3 1/2” Pulley (15) and a Cable Trap (66) to the indicated hole in the Long “U”-Bracket (57) with a 3/8” x 2” Bolt (12) and a 3/8” Nylon Locknut (21). **Be sure that the Cable Trap is inside the “U”-Bracket. Note: This may come pre-assembled.**

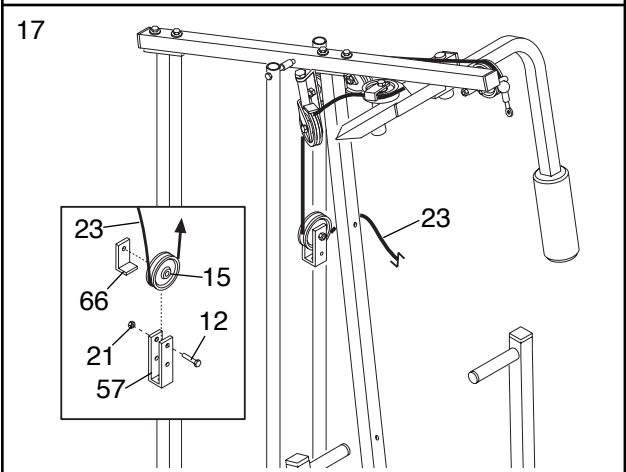

18. **Note: The Pulley (15) in this drawing is pre-assembled. It is shown disassembled for easy part identification.**


Route the Long Cable (23) around the 3 1/2” Pulley (15) attached to the bracket on the Top Frame (55). Tighten the 3/8” x 2” Bolt (12) and the 3/8” Nylon Locknut (21). **Be sure that the Cable is in the groove of the Pulley and that the Cable and Pulley move smoothly.**

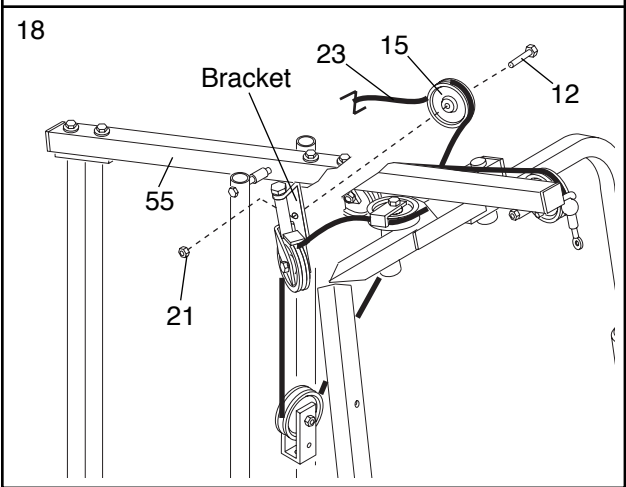


19. **Note: This assembly step shows how to complete the assembly of several pre-attached parts.**

The 5/8" x 9/16" Spacer (73) has been pre-attached on the outside of the 3 1/2" Low Pulley (77) for shipping purposes. Remove the 3/8" Nylon Locknut (21), the Spacer, and the Pulley from the 3/8" x 3 3/4" Bolt (71). **Do not remove the Bolt. The Bolt has been shown removed for part identification.**


Reattach the 3 1/2" Low Pulley (77), with the 5/8" x 9/16" Spacer (73) between the Pulley and the Press Frame (17). **Do not tighten the 3/8" Nylon Locknut (21) yet. Be sure that the 3/8" x 3 3/4" Bolt (71), the 3/8" Flat Washer (9), the 5/8" x 9/16" Spacer (73), the 3 1/2" Low Pulley (77), and the 3/8" Nylon Locknut (21) are oriented as shown.**

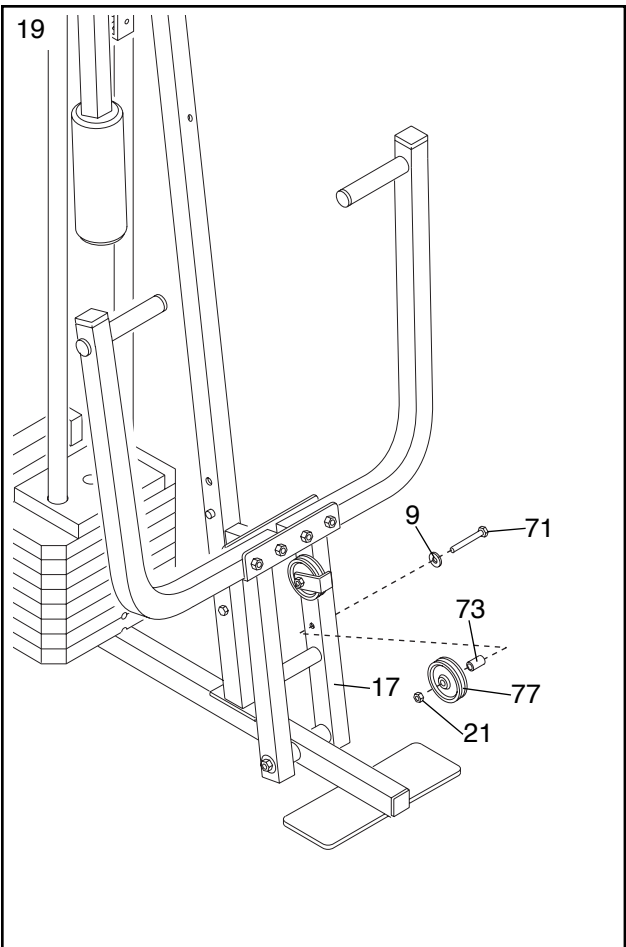


20. **Locate the Short Cable (58).** Route the Short Cable (58) under the 3 1/2" Low Pulley (77). **Be sure that the end of the Cable with the ball is on the indicated side of the Press Frame (17) and that the Cable is between the Pulley and the crossbar on the Press Frame.** Tighten the 3/8" Nylon Locknut (21) and the 3/8" x 3 3/4" Bolt (not shown).

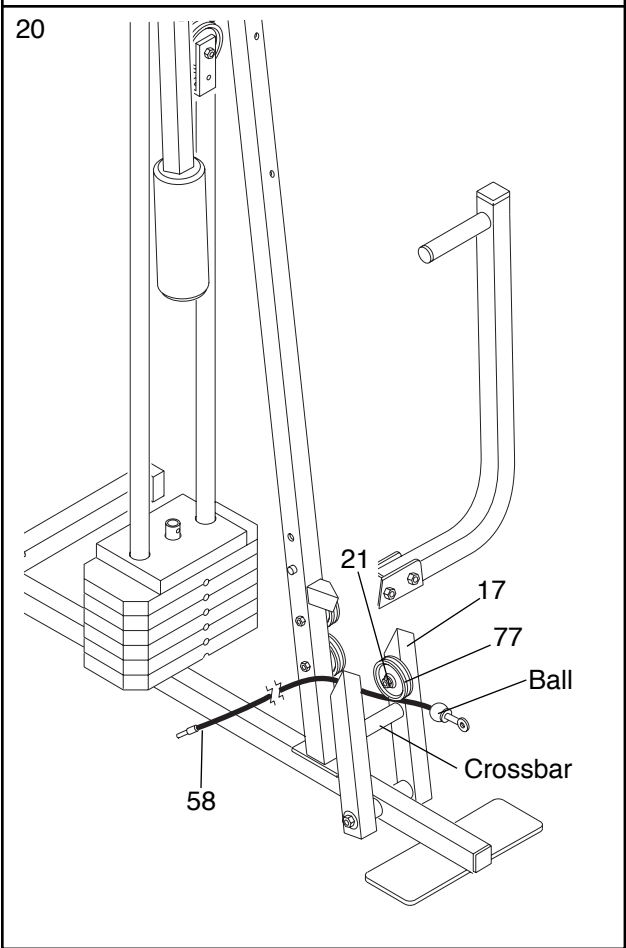


21. Route the Short Cable (58) around the 3 1/2” Pulley (15) attached to the lower hole in the Front Upright (42). **See the inset drawing. Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.** Tighten the 3/8” Nylon Locknut (21) and the 3/8” x 3 3/4” Bolt (71).

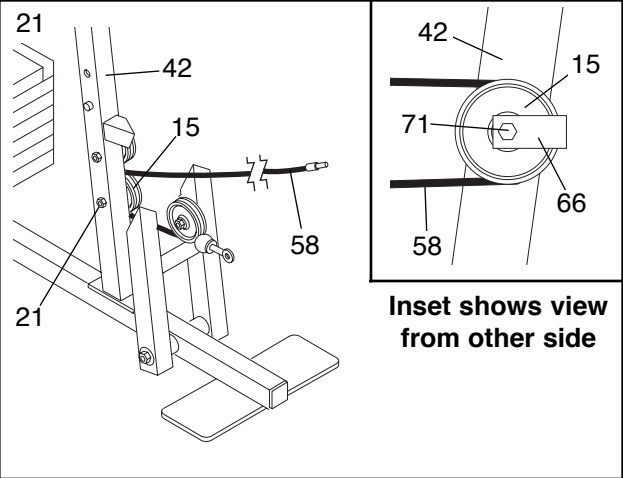


22. Route the Short Cable (58) around the 3 1/2” Pulley (15) attached to the upper hole in the Press Frame (17). **Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.** Tighten the 3/8” Nylon Locknut (21) and the 3/8” x 3 1/2” Bolt (not shown).

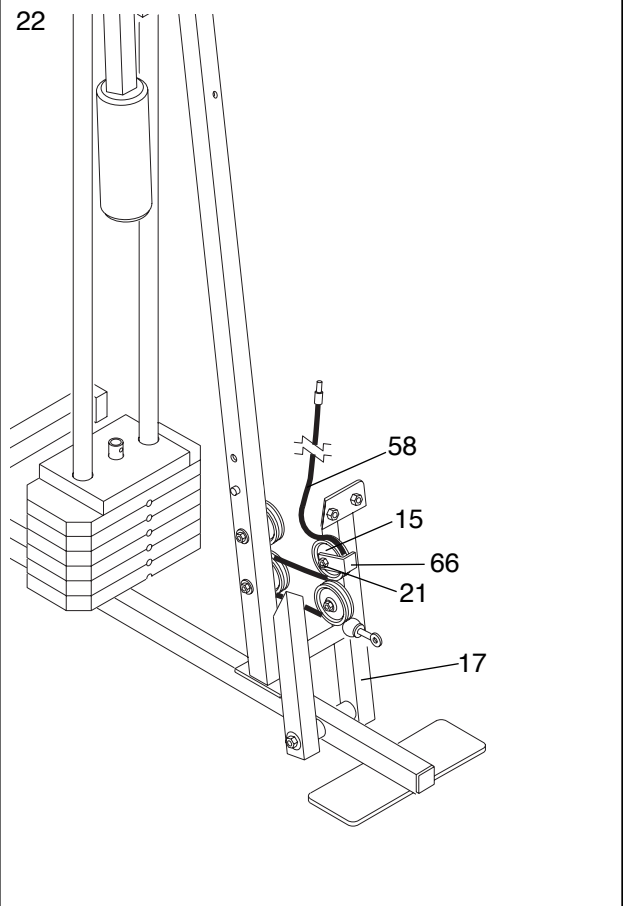

23. Route the Short Cable (58) around the 3 1/2” Pulley (15) attached to the upper hole in the Front Upright (42). **See the inset drawing. Be sure that the Cable Trap (66) is turned to hold the Cable in place and that the Cable is routed around the Pulley as shown.** Tighten the 3/8” Nylon Locknut (21) and the 3/8” x 3 3/4” Bolt (71).

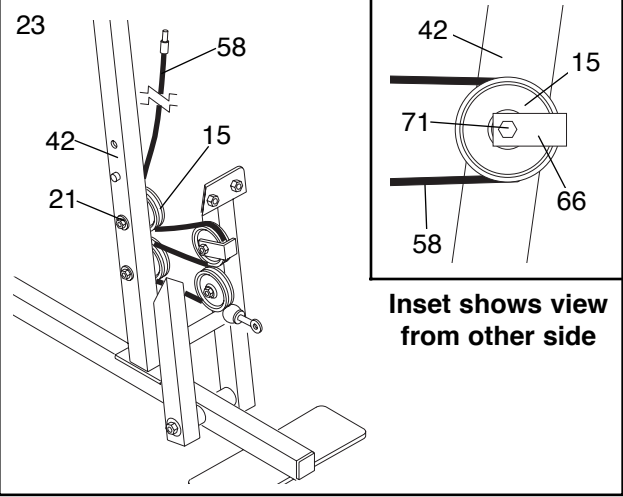


24. Attach the end of the Short Cable (58) to the Long “U”-Bracket (57) with a 1/4” Nylon Locknut (2) and a 1/4” Flat Washer (10). **Do not completely tighten the Nylon Locknut. It should be threaded onto the end of the Cable so only a couple of threads are showing above the nut, as shown in the inset drawing.**

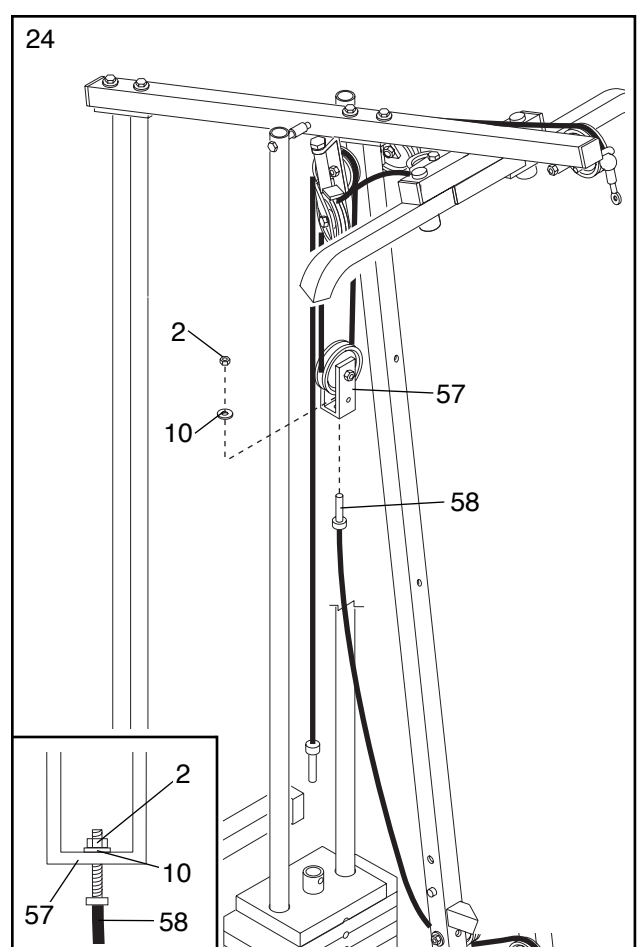


25. Attach the Long Cable (23) to the Small “U”-Bracket (67) with a 1/4” Nylon Locknut (2) and a 1/4” Flat Washer (10). **Do not completely tighten the Nylon Locknut. It should be threaded onto the end of the Cable only a couple of turns, as shown in the inset drawing.**

Attach the Small “U”-Bracket (67) to the Weight Tube (63) with the 5/16” x 1 1/2” Bolt (72) and a 5/16” Nylon Locknut (3).

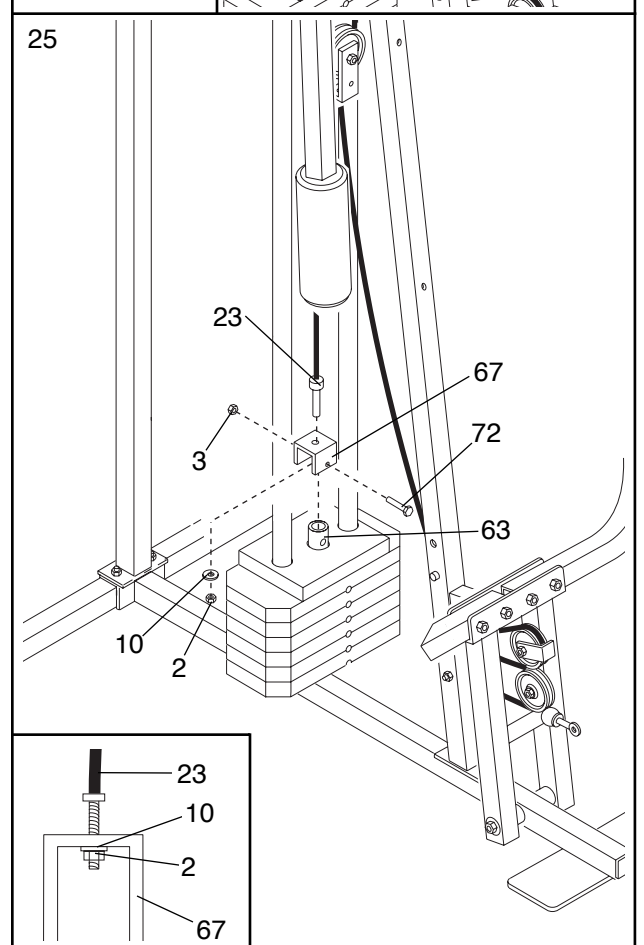

26. Attach the Backrest (41) to the Front Upright (42) with two 1/4" x 2 1/2" Screws (43) and two 1/4" Flat Washers (10).

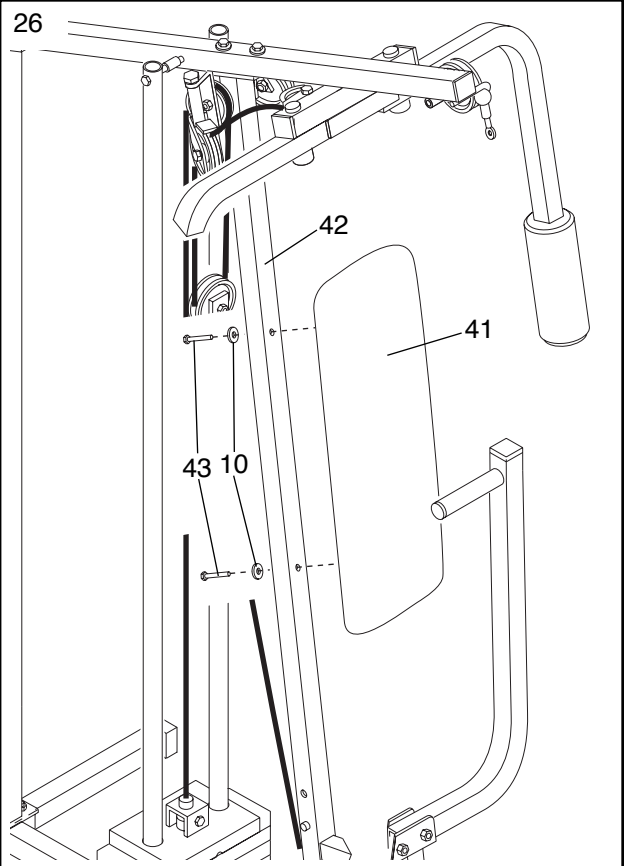


27. Press a 1 1/2" Square Inner Cap (32) into the Seat Frame (36).

Insert the 1/4" x 2" Carriage Bolt (38) into the centre hole in the Seat Plate (37). Attach the Seat Plate to the Seat (13) with two 1/4" x 1/2" Screws (18).

Insert the 1/4" x 2" Carriage Bolt (38) into the indicated hole in the Seat Frame (36). Tighten a 1/4" Nylon Locknut (2) with a 1/4" Flat Washer (10) onto the Carriage Bolt.


Attach the other end of the Seat (13) to the Seat Frame (36) with a 1/4" Flat Washer (10) and the 1/4" x 2" Screw (24).

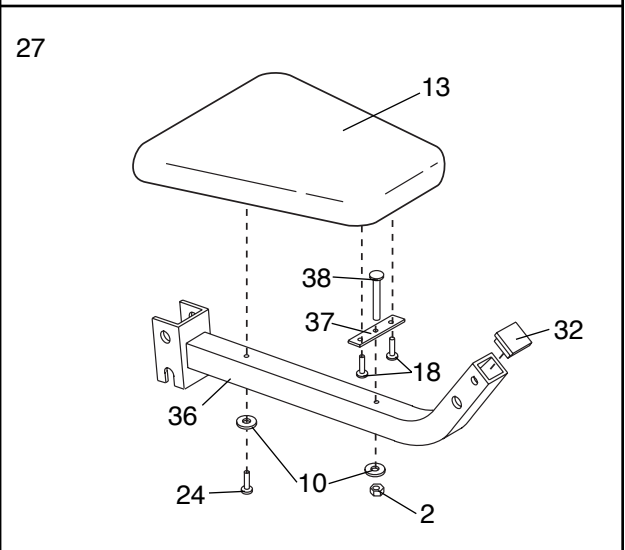


28. Press a 1 1/2" Square Inner Cap (32) into the Leg Lever (29).

Lubricate the 5/16" x 2 1/4" Bolt (33). Attach the Leg Lever (29) to the Seat Frame (36) with the 5/16" x 2 1/4" Bolt and a 5/16" Nylon Locknut (3). **Do not overtighten the Nylon Locknut. The Leg Lever must be able to pivot freely.**


Insert the 5/16" x 2" Eyebolt (35) into the Leg Lever (29) from the direction shown. Tighten a 5/16" Nylon Locknut (3) with a 5/16" Flat Washer (8) onto the Eyebolt.

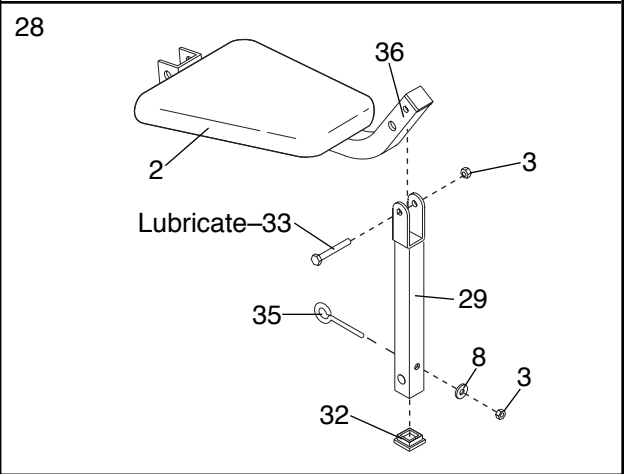


29. Rest the Seat Frame (36) on the indicated pin in the Front Upright (42). Attach the Seat Frame to the Front Upright with a 5/16" x 2 3/4" Carriage Bolt (14) and the Seat Knob (40).

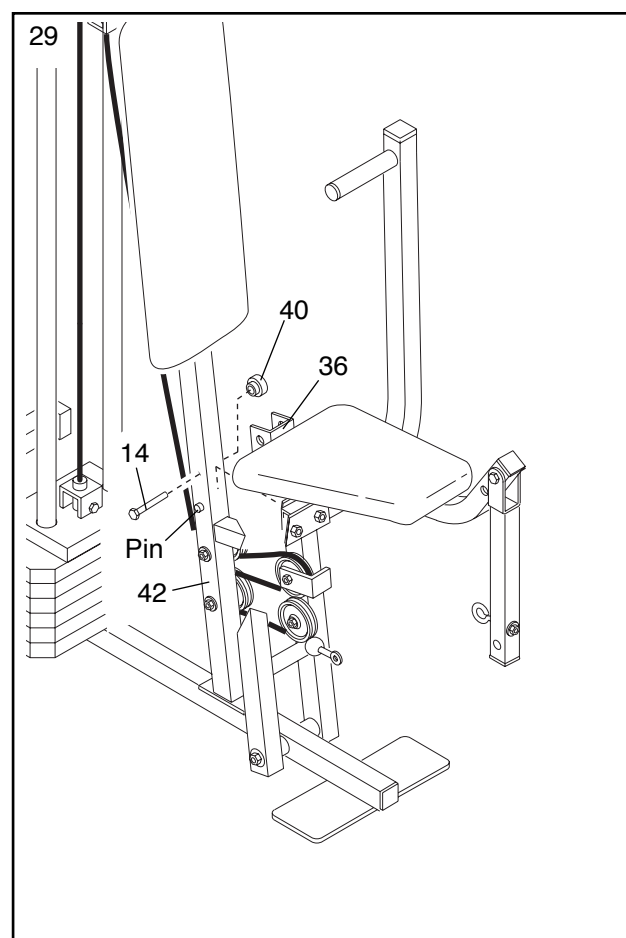

30. Press 3/4" Round Inner Caps (34) into the ends of both 12 1/2" Pad Tubes (28).
- Insert one 12 1/2" Pad Tube (28) into the Seat Frame (36). Slide a 5 1/2" Pad (30) onto each end of the Pad Tube.
- Insert the other 12 1/2" Pad Tube (28) into the Leg Lever (29). Slide a 5 1/2" Pad (30) onto each end of the Pad Tube.

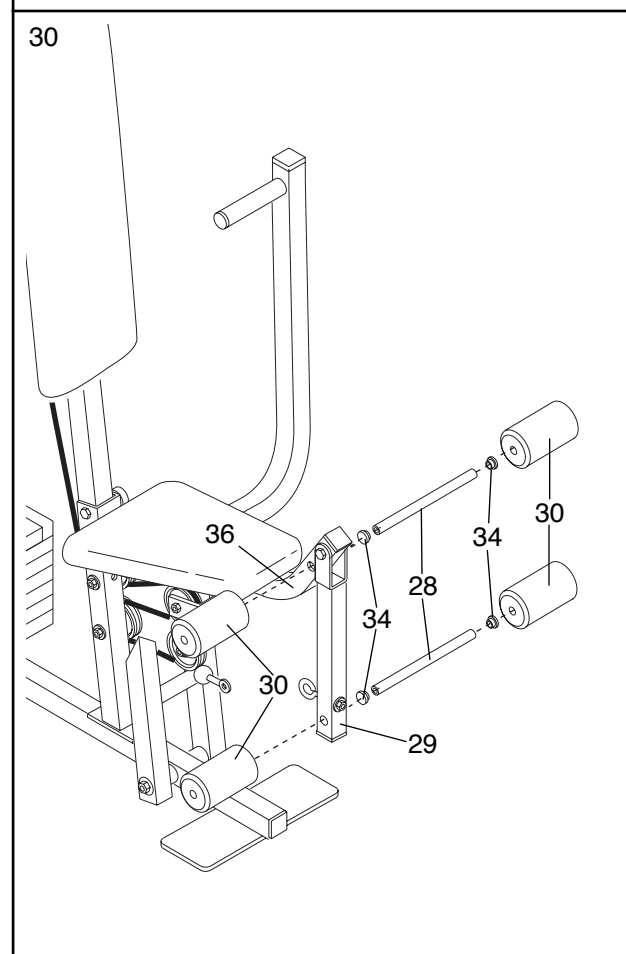

31. Remove the decals from the decal sheet (not shown) and apply them to the home gym system in the locations shown below.

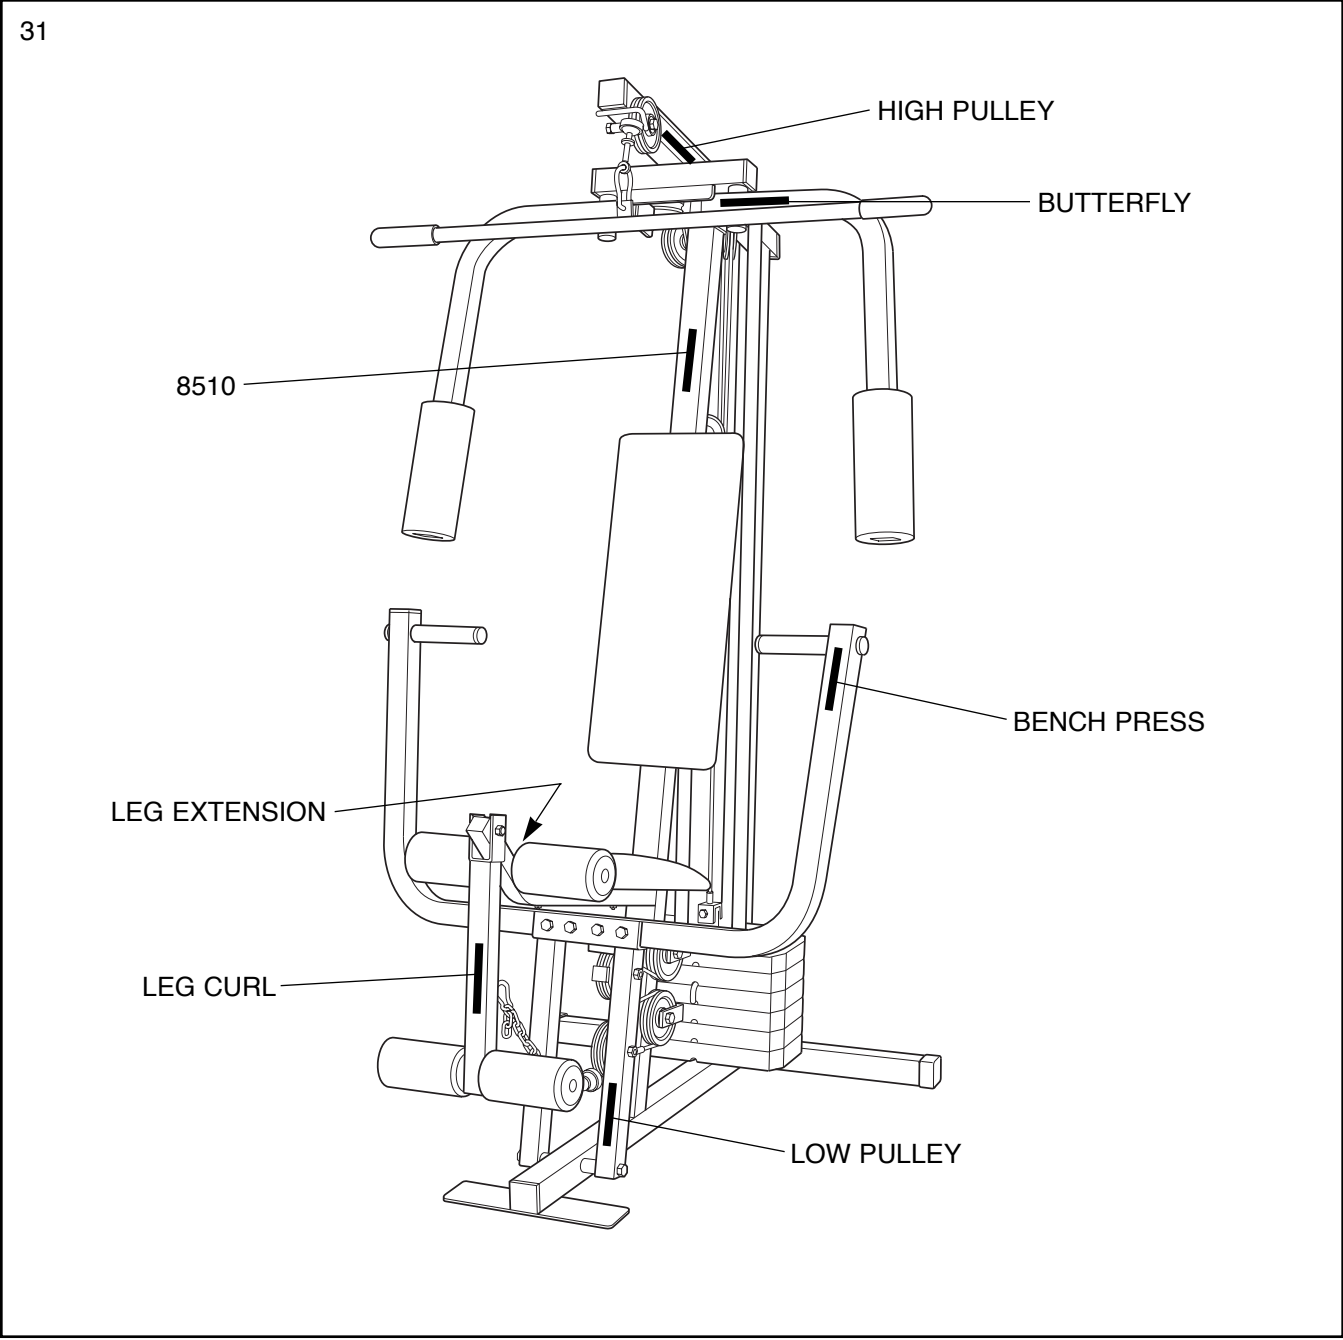

32. Make sure that all parts have been properly tightened. The use of the remaining parts will be explained in ADJUSTMENT, beginning on page 17 of this manual.

Before using the home gym system, pull each cable a few times to be sure that the cables move smoothly over the pulleys. If one of the cables does not move smoothly, find and correct the problem. **IMPORTANT: If the cables are not properly installed, they may be damaged when heavy weight is used. See the CABLE DIAGRAM on page 20 of this manual for proper cable routing. If there is any slack in the cables, you will need to remove it by tightening the cables. See TROUBLE-SHOOTING AND MAINTENANCE on page 19.**

ADJUSTMENT

The instructions below describe how each part of the home gym system can be adjusted. **IMPORTANT: When attaching the lat bar or nylon strap, make sure that the attachments are in the correct starting position for the exercise to be performed. If there is any slack in the cables or chain as an exercise is performed, the effectiveness of the exercise will be reduced.**

CHANGING THE WEIGHT SETTING

To change the weight setting of the weight stack, insert a Weight Pin (26) under the desired Weight (25). Be sure to insert the Weight Pin until the bent end of the Weight Pin is touching the Weights, and turn the bent end downward. The weight setting of the weight stack can be changed from 6,5 pounds to 81,5 pounds, in increments of 12,5 pounds. **Note: Due to the cables and pulleys, the actual amount of resistance at each exercise station may vary from the weight setting. Use the WEIGHT RESISTANCE CHART on page 18 to find the actual amount of resistance at each weight station.**

ATTACHING THE LAT BAR OR NYLON STRAP TO THE HIGH PULLEY STATION


Attach the Lat Bar (54) to the Long Cable (23) with a Cable Clip (53). For some exercises, the Chain (52) should be attached between the Lat Bar and the Long Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Long Cable so the Lat Bar is in the correct starting position for the exercise to be performed.**

The Nylon Strap (39) (not shown) can be attached in the same manner.

ATTACHING THE LAT BAR OR NYLON STRAP TO THE LOW PULLEY STATION

Attach the Lat Bar (54) to the Short Cable (58) with a Cable Clip (53). For some exercises, the Chain (52) should be attached between the Lat Bar and the Pulley Cable with two Cable Clips. **Adjust the length of the Chain between the Lat Bar and the Short Cable so the Lat Bar is in the correct starting position for the exercise to be performed.**

The Nylon Strap (39) (not shown) can be attached in the same manner.

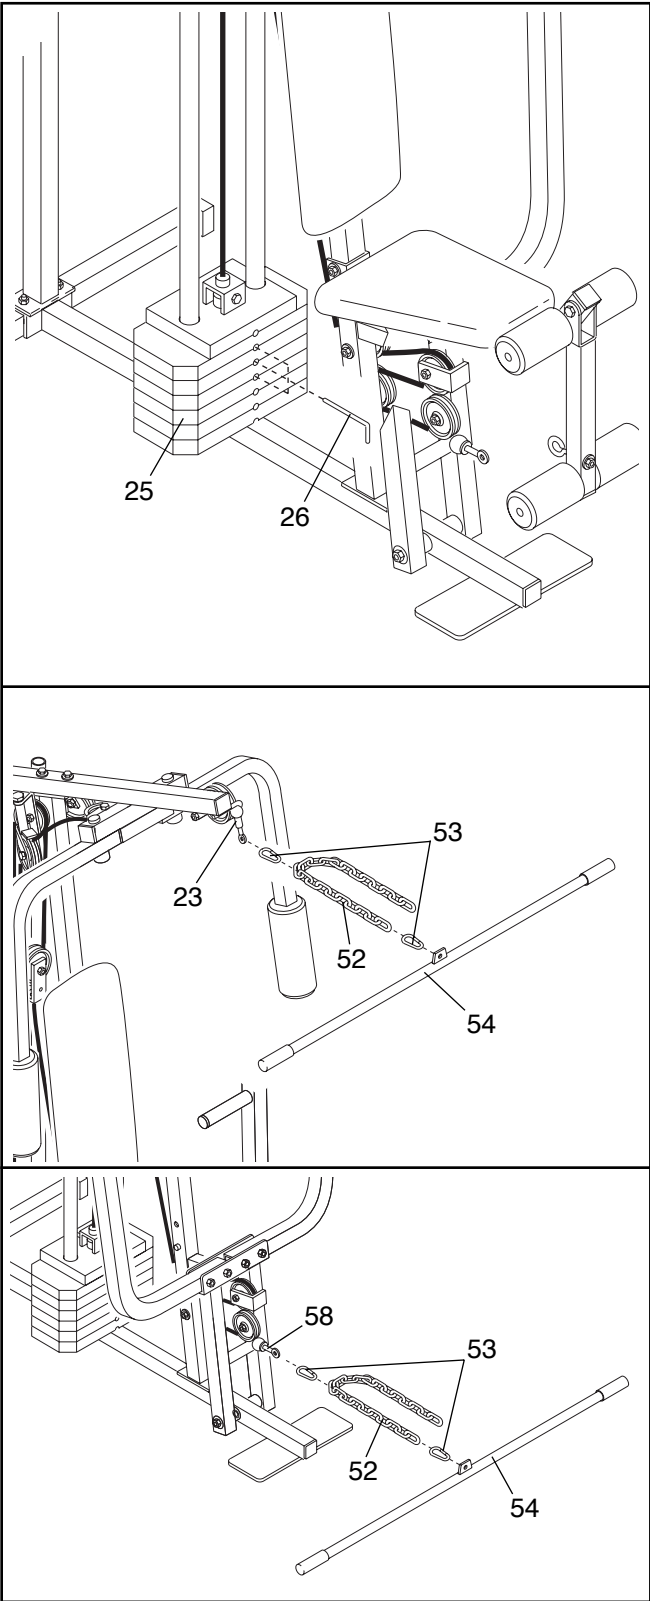

ATTACHING AND REMOVING THE SEAT


Set the bracket on the Seat Frame (36) onto the indicated pins on the Front Upright (42). Attach the Seat Frame to the Front Upright with the 5/16” x 2 3/4” Carriage Bolt (14) and the Seat Knob (40).

For some exercises, the Seat (13) must be removed. First, be sure that the chain is not attached to the leg lever. Next, remove the Seat Knob (40) and the 5/16” x 2 3/4” Carriage Bolt (14) from the Seat Frame (36). Lift the Seat Frame off the Front Upright (42).

ATTACHING THE LEG LEVER TO THE LOW PULLEY STATION

To use the Leg Lever (29), the seat must be attached to the front upright (see ATTACHING AND REMOVING THE SEAT above).

Attach one end of the Chain (52) to the Short Cable (58) with a Cable Clip (53). Attach the other end of the Chain to the Eyebolt (35) with a Cable Clip.

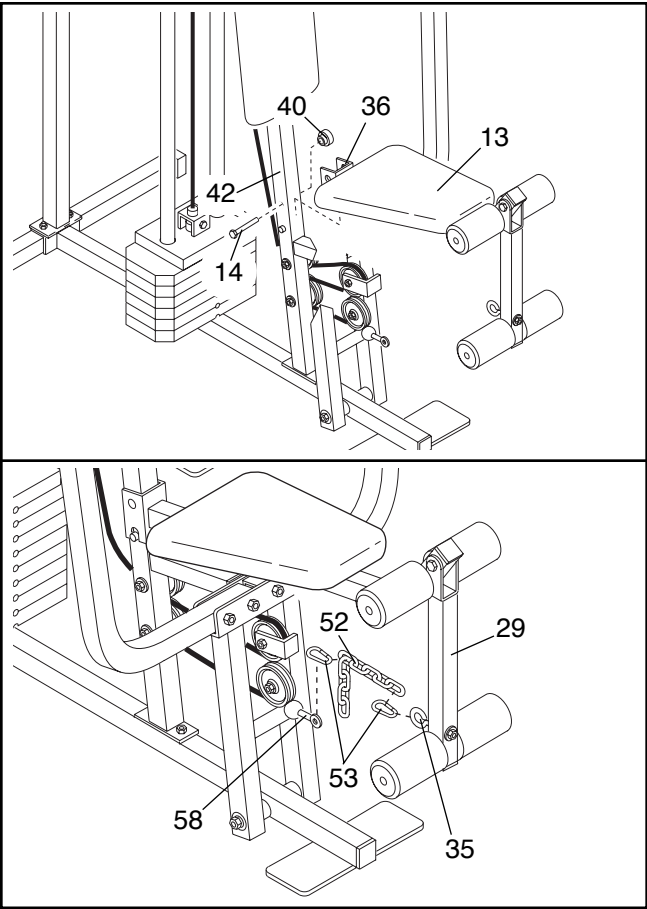

WEIGHT RESISTANCE CHART

This chart shows the approximate weight resistance at each station. “Top” refers to the 6,5 lb. top weight. The other numbers refer to the 12,5 lb. weight plates. Weight resistance shown for the butterfly arm station is for each butterfly arm.

WEIGHT PLATES	PRESS ARM (lbs.)	BUTTERFLY ARM (lbs.)	LEG LEVER (lbs.)	HIGH PULLEY (lbs.)	LOW PULLEY (lbs.)
Top	20	10	15	14	24
1	45	22	36	28	54
2	70	33	54	44	82
3	99	42	75	60	115
4	128	48	96	72	147
5	153	60	115	90	175
6	184	69	137	103	209

The actual resistance at each weight station may vary due to differences in individual weight plates, as well as friction between the cables, pulleys, and weight guides.

TROUBLE-SHOOTING AND MAINTENANCE

Inspect and tighten all parts each time you use the home gym system. Replace any worn parts immediately. The home gym system can be cleaned using a damp cloth and mild non-abrasive detergent. Do not use solvents.


TIGHTENING THE CABLES

Woven cable, the type of cable used on the home gym system, can stretch slightly when it is first used. If there is slack in the cables before resistance is felt, the cables should be tightened. Slack can be removed from the cables by tightening the 1/4" Nuts (2) at the end of the Long Cable (23) (see drawing 1) and at the end of the Short Cable (58) (see drawing 2). To do this you may need to remove the Small "U"-Bracket (67) from the Weight Tube (not shown) or remove the 3 1/2" Pulley (15) from the Long "U"-Bracket (57). Make sure that the cables are not too tight, or the Top Weight (76) will be lifted off the weight stack.

Additional slack can be removed by moving the 3 1/2" Pulley (15) to the other hole in the Long "U"-Bracket (57). Remove the 3/8" Nylon Locknut (21) and the 3/8" x 2" Bolt (12) from the Cable Trap (66), Pulley, and "U"-Bracket. Re-attach the Pulley and Cable Trap. Be sure that the Cable trap is in the proper position and that the Cable and Pulley move smoothly.


Note: Inspect all cables before each use. If a cable tends to slip off the pulleys often, the cable may have become twisted. Remove the cable and re-install it.

If the cables need to be replaced, see ORDERING REPLACEMENT PARTS on the back cover of this manual. **Replace all cables every two years.**

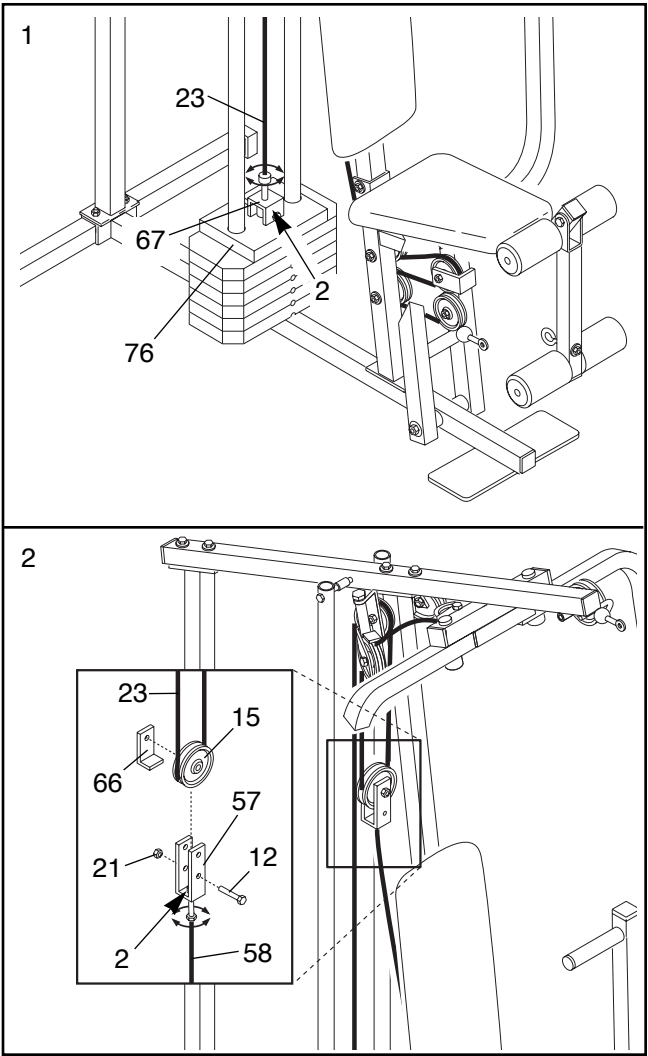

CABLE DIAGRAM

The cable diagram below shows the proper routing of the Short Cable (58) and the Long Cable (23). Use the diagram to be sure that the two cables and the cable traps have been assembled correctly. If the cables have not been correctly routed, the home gym system will not function properly and damage may occur. The numbers show the correct route for each cable. The starting and ending points of each cable are labelled. **Be sure that the cable traps do not touch or bind the cables.**

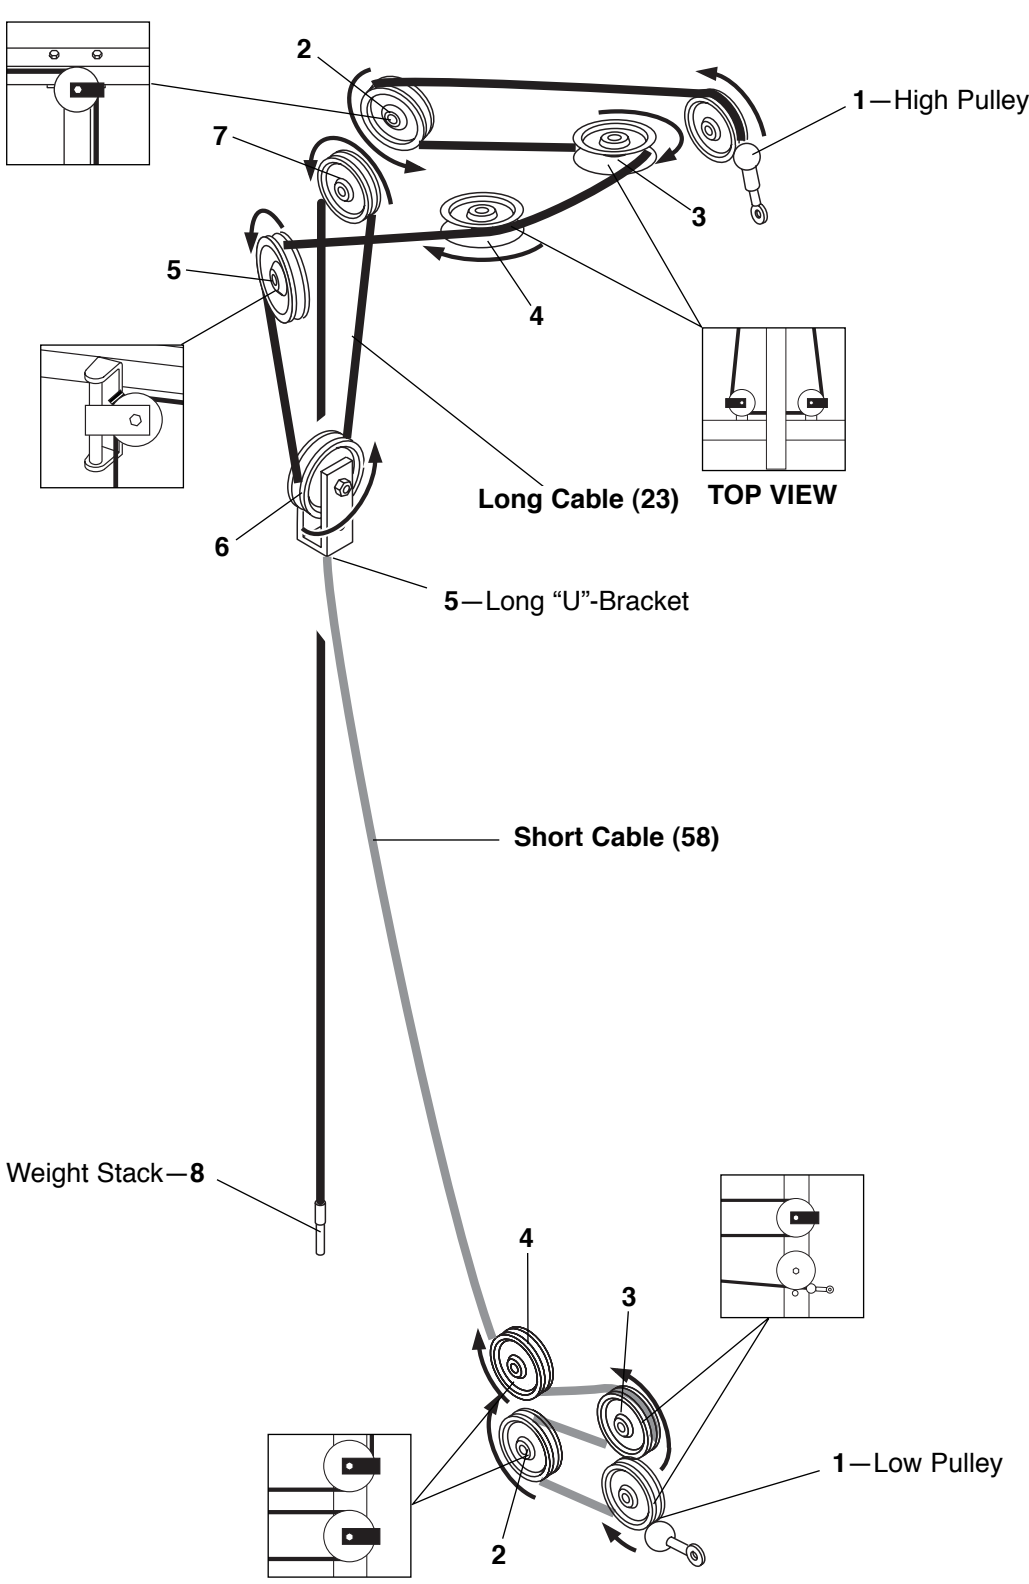

PART LIST—Model No. WESY85101


R1197A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	2	5/16" x 2 1/2" Carriage Bolt	40	1	Seat Knob
2	3	1/4" Nylon Locknut	41	1	Backrest
3	17	5/16" Nylon Locknut	42	1	Front Upright
4	1	Base	43	2	1/4" x 2 1/2" Screw
5	1	Stabiliser	44	6	1 3/4" Square Inner Cap
6	3	"V"-Pulley	45	2	10" Pad
7	3	3/8" x 2 1/2" Bolt	46	2	Press Arm
8	5	5/16" Flat Washer	47	1	Left Arm
9	4	3/8" Flat Washer	48	1	Right Arm
10	6	1/4" Flat Washer	49	6	1" Round Inner Cap
11	4	5/16" x 2 3/4" Bolt	50	3	Long Cable Trap
12	3	3/8" x 2" Bolt	51	2	2" Square Outer Cap
13	1	Seat	52	1	Chain
14	3	5/16" x 2 3/4" Carriage Bolt	53	2	Cable Clip
15	7	3 1/2" Pulley	54	1	Lat Bar
16	1	3/8" x 3 1/2" Bolt	55	1	Top Frame
17	1	Press Frame	56	1	Rear Upright
18	2	1/4" x 1/2" Screw	57	1	Long "U"-Bracket
19	2	Weight Bumper	58	1	Short Cable
20	1	Pulley Bracket	59	1	3/8" x 8" Bolt
21	12	3/8" Nylon Locknut	60	1	5/16" x 6" Bolt
22	4	5/16" x 2 1/2" Bolt	61	2	1/2" x 3/4" Spacer
23	1	Long Cable	62	2	Weight Guide
24	1	1/4" x 2" Screw	63	1	Weight Tube
25	6	Weight	64	1	Weight Tube Bumper
26	1	Weight Pin	65	1	1" Square Inner Cap
27	3	2" Square Inner Cap	66	5	Cable Trap
28	2	12 1/2" Pad Tube	67	1	Small "U"-Bracket
29	1	Leg Lever	68	1	5/16" x 5" Bolt
30	4	5 1/2" Pad	69	4	1" Retainer
31	2	Hand Grip	70	2	1" Round Cover Cap
32	2	1 1/2" Square Inner Cap	71	4	3/8" x 3 3/4" Bolt
33	1	5/16" x 2 1/4" Bolt	72	1	5/16" x 1 1/2" Bolt
34	4	3/4" Round Inner Cap	73	1	5/8" x 9/16" Spacer
35	1	5/16" x 2" Eyebolt	74	2	1 1/8" x 2 1/2" Plastic Bushing
36	1	Seat Frame	75	2	1" x 7/8" Plastic Bushing
37	1	Seat Plate	76	1	Top Weight
38	1	1/4" x 2" Carriage Bolt	77	1	3 1/2" Low Pulley
39	1	Nylon Strap	#	1	User's Manual

Note: “#” indicates a non-illustrated part. Specifications are subject to change without notice.

EXPLODED DRAWING—Model No. WESY85101

R1197A

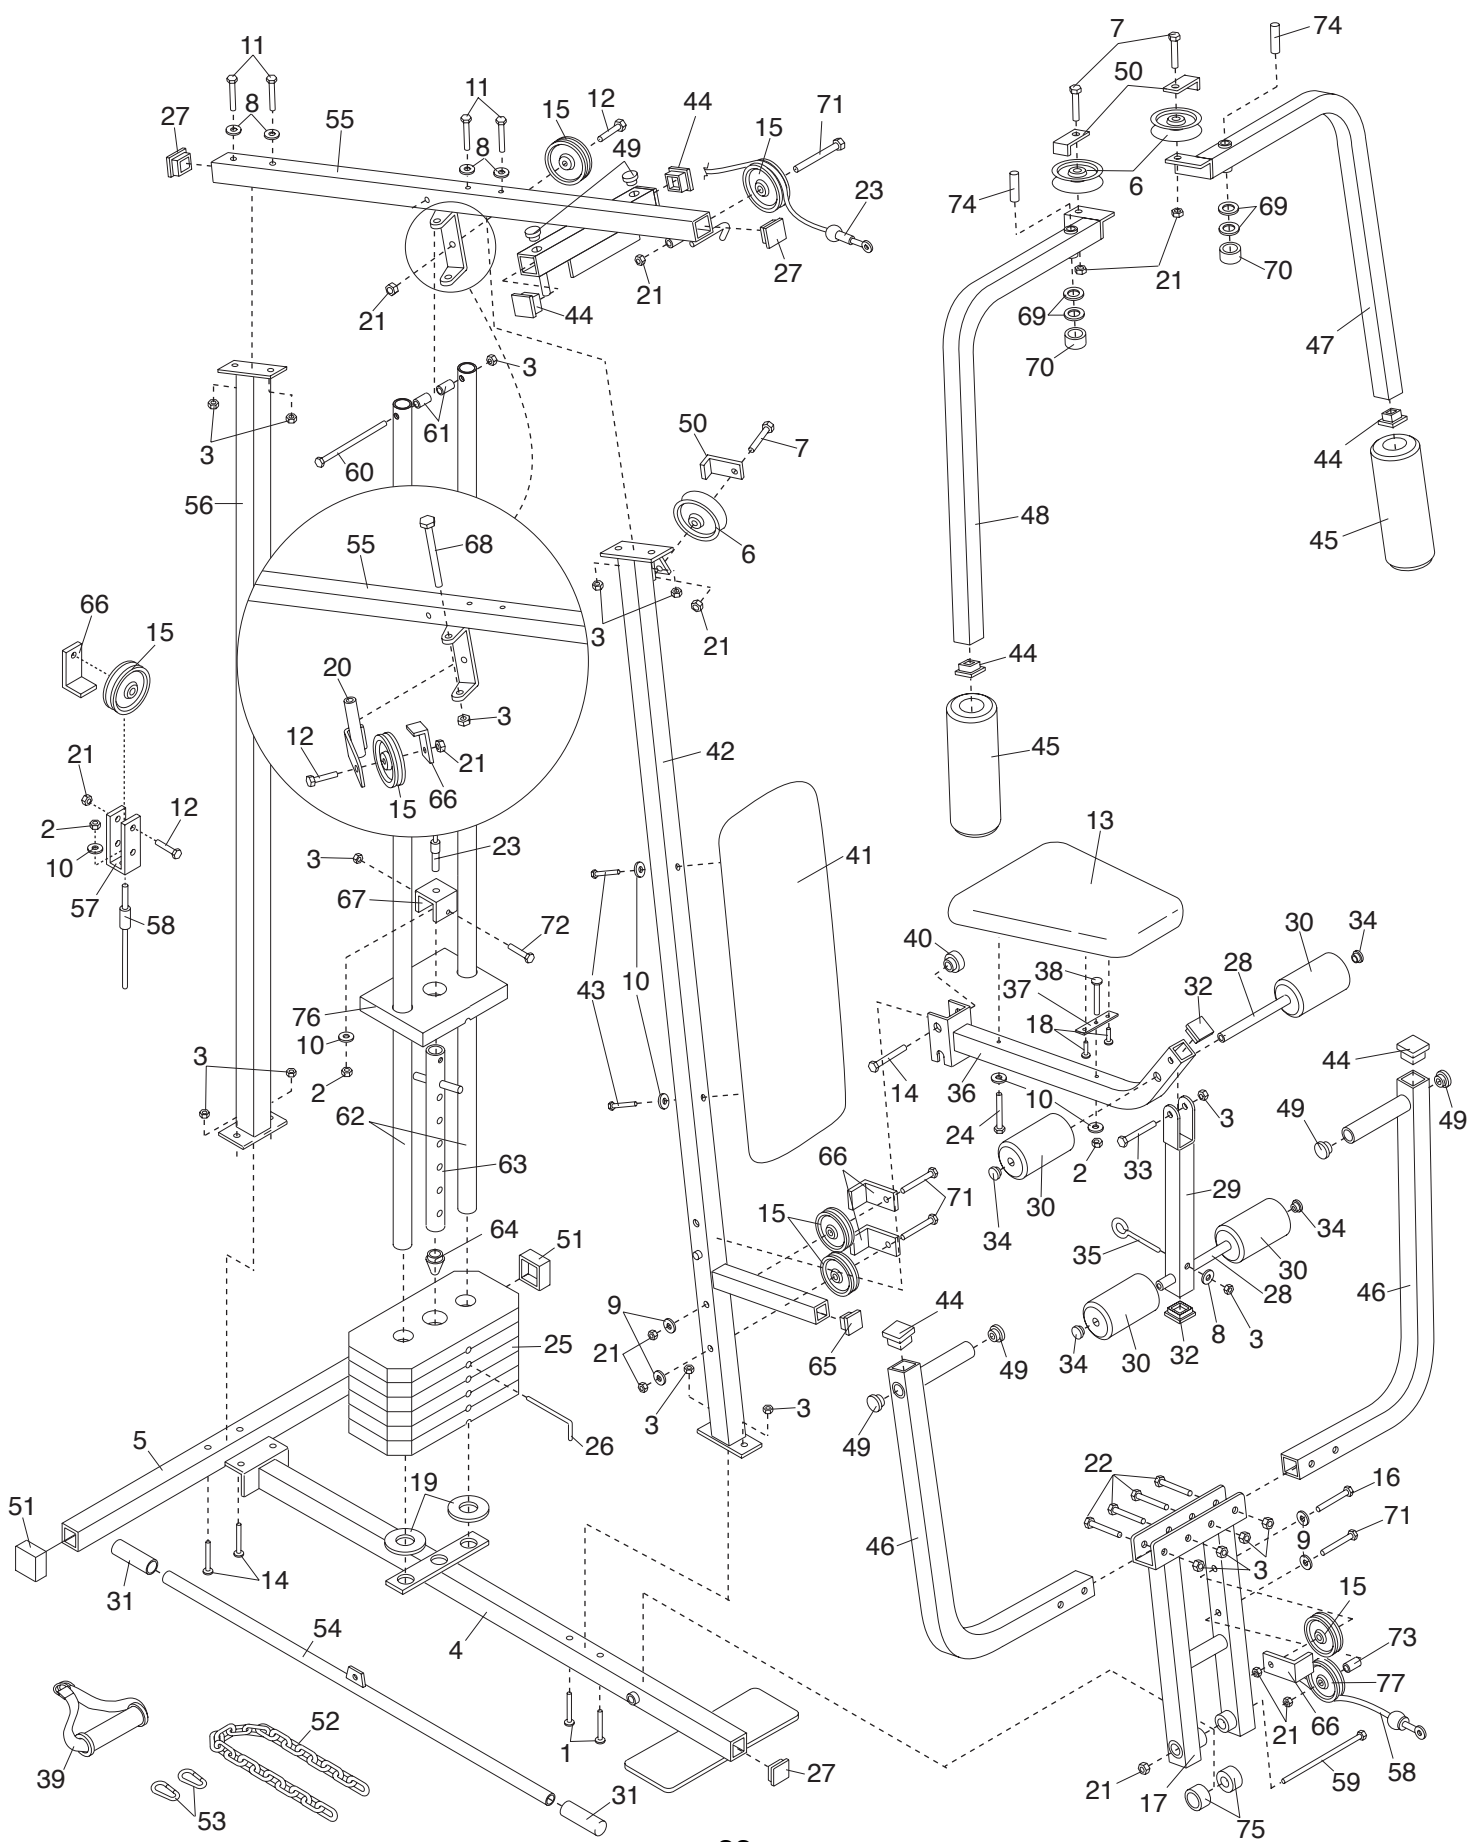




1/4" Nylon Locknut (2)–3




5/16" Nylon Locknut (3)–17




3/8" Nylon Locknut (21)–12

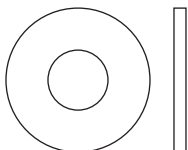


1/4" Flat Washer (10)–6

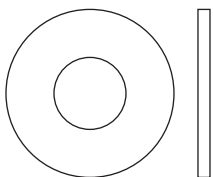


5/16" Flat Washer (8)–5

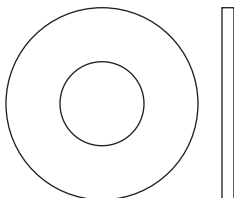


3/8" Flat Washer (9)–4




1/4" x 1/2" Screw (18)–2




1/4" x 2" Carriage Bolt (38)–1




1/4" x 2" Screw (24)–1




1/4" x 2 1/2" Screw (43)–2



5/16" x 1 3/4" Bolt (72)–1




5/16" x 2 1/2" Bolt (22)–4




5/16" x 2 3/4" Bolt (11)–4



5/16" x 2 1/2" Carriage Bolt (1)–2

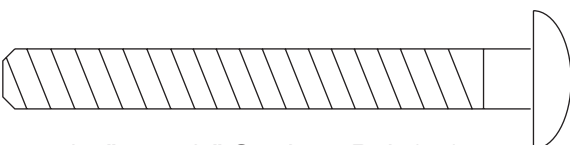


5/16" x 2 3/4" Carriage Bolt (14)–3




5/16" x 5" Bolt (68)–1




5/16" x 6" Bolt (60)–1

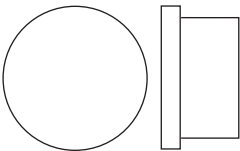


3/4" Round Inner Cap (34)–4

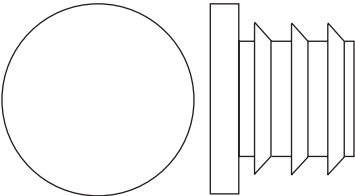


1" Round Inner Cap (49)–6

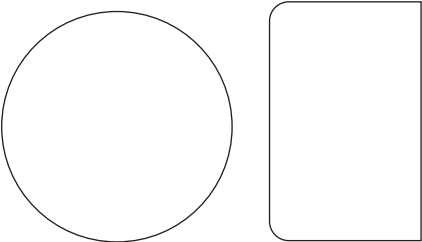


1" Round Cover Cap (70)–2

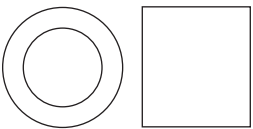


5/8" x 9/16" Spacer (73)–1




1/2" x 3/4" Spacer (61)–2

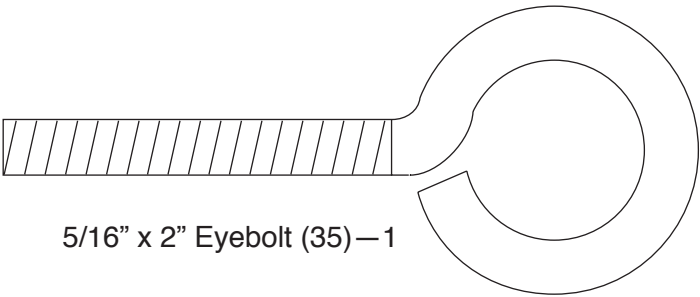


5/16" x 2" Eyebolt (35)–1

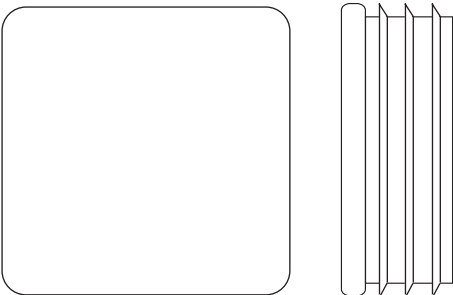


1 1/2" Square Inner Cap (32)–2

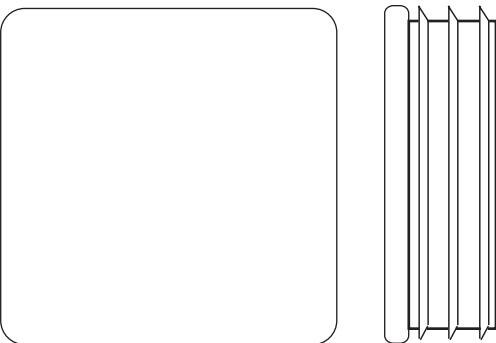

1 3/4" Square Inner Cap (44)–6

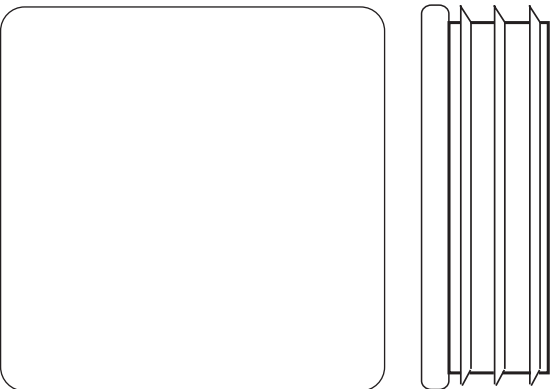

2" Square Inner Cap (27)–3

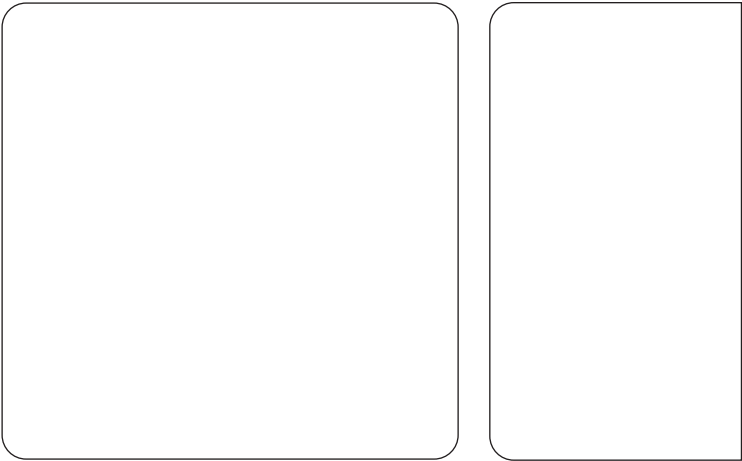

2" Square Outer Cap (51)–2

ORDERING REPLACEMENT PARTS

If you encounter any difficulties or problems with this product, contact the ICON Fitness Lifestyle Ltd. office, or write:

ICON Fitness Lifestyle Ltd.
Greenwich House
223 North Street
Sheepscar
West Yorkshire
Leeds LS7 2AA

Tel: Country Code: 0345-089009
Fax: 0113-2411120

To help us assist you, please be prepared to give the following information:

1. The MODEL NUMBER of the product (WESY85101).
2. The NAME of the product (WEIDER® 8510 Home Gym System).
3. The SERIAL NUMBER of the product (see the front cover of this manual).
4. The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST on page 22 of this manual.)